ACCESABILITY

CREDITS

@Goth_3Designs - Cedric Vidal
-Chassis deisgn & saber build

@SabersForever - Jonathan Rossi
-Saber programming and instructions

@KRSabers - Khal Jahromi-Mohazzeb
-Hilt producer

@Kyberphonic - Jesse Kirkbride
-Soundfont design

ACCESABILITY

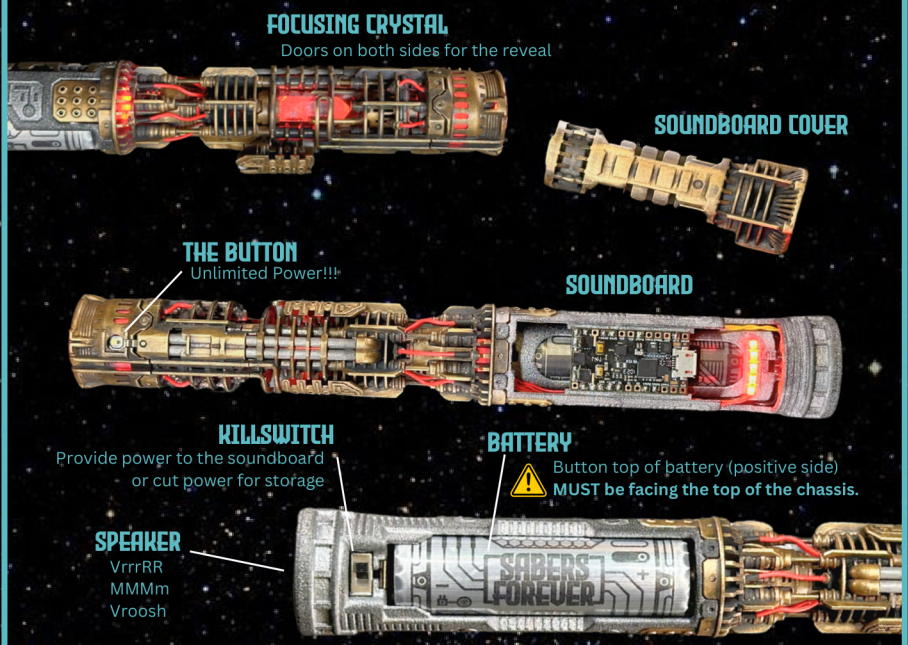

CONTROLS

While Blade is OFF

Turn On - Tap button or twist on.
-To "twist on" rotate the saber one direction, then back to its original position quickly. Like a motorcycle handle.

Change Profile - Hold button for one second and release.
-or-
Long press the button until you enter profile selector
-Twist left and right to change profiles.
-Click button to select.

Play Track - Double tap button while horizontal
-Twist left and right to change tracks.
-Click button to select.
-Double tap again to stop.

Start Muted - Double tap the button but hold the second press for an additional second.

Enter Edit Mode - double tap the button and hold the second press until you enter edit mode.

While Blade is ON

Turn off - Hold Button or twist off.

Blast - Tap button.

Clash - Clash saber.

Lockup - Hold button and clash saber.

Lightning block - double click and hold button on second press.

Melt - hold button and stab parallel. Twist to change tip color.

Color Change - Click the button 4 times to enter mode
-Twist left or right to select a color.
-Tap to select
-Hold to revert